

Setup instruction for UniVox AutoScart

Background:

A loop amplifier connecting through a SCART to a TV-set works fine with just the TV. However when using other devices such as VCR, SAT-convert, etc. the sound is still just from the TV.


Solution:

The solution is the smart automatic AutoScart. Connect any external devices (TV, VCR, SAT, digital converter) that complies to the SCART standard. The active AutoScart sense what SCART device that is active. It is all powered by the UniVox loop amplifier systems. No batteries need to be changed. The required power comes from the loop amplifier only. The AutoScart works with all our loop amplifiers except the old UNIVOX 38B (no longer in production).

Basic Instructions:

Please verify that your original setup works automatically, switching between TV-channels and external devices. Note: This is normally not a problem if SCART connectors are used.


One external device, VCR or SAT

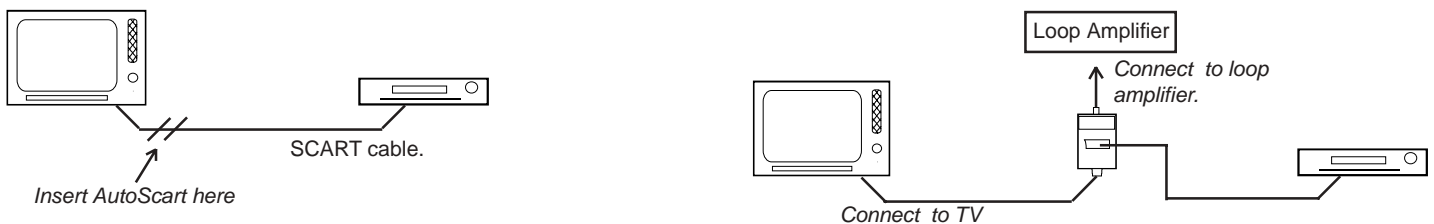

Connections:

1. Disconnect the SCART cable (male) from TV-set and insert it into the AutoScart female input.
2. Connect AutoScarts SCART cable to Television SCART (preferably SCART1 if there are more than one SCART connector).
3. Connect AutoScart output to the loop amplifier.

More than one external devices

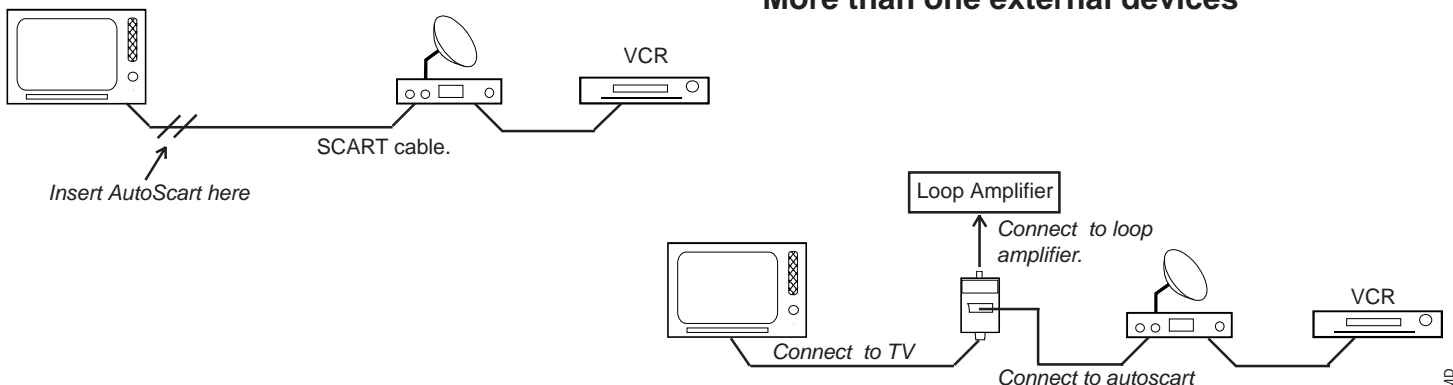

Connections:

1. Disconnect the SCART cable (male) from TV-set and insert it into the AutoScart female input.
2. Connect AutoScarts SCART cable to Television SCART (preferably SCART1 if there are more than one SCART connector).
3. Connect AutoScart output to the loop amplifier.

Please not that all external devices more than one should be in serial connection as explained in the figures.

AutoScart

Part-no: 284016 3.5mm jack for UNIVOX 1A, 2A, & 70A

Part-no: 284018 5 pin-DIN, for UNIVOX 380

